

TIMBER MOSAICS INSTALLATION GUIDE

DIY READY

Timber Mosaics panels are designed for fast, seamless installation, whether you're tackling a weekend DIY project or outfitting a professional space.

Each panel mounts directly to the wall and aligns cleanly with the next, creating a continuous dimensional wood mosaic. The precision tongue-and-groove design helps guide alignment as you work, making it easy to maintain a consistent pattern across the wall.

WHAT YOU NEED

This list contains the minimum recommended tools and installation products for installation of the Timber Mosaics accent wall.

- Pencil
- Level
- Stud Finder
- Circular Saw
- Drill with "screw bit" driver
- Caulking Gun
- Construction Adhesive (PL 400 or equivalent)

INSTALLATION STEPS

1. Prepare the Wall

Ensure the wall surface is clean, dry, and structurally sound. Locate wall studs using a stud finder and mark their positions before installing panels.

2. Plan Layout

Dry fit panels on open floor area to understand the layout before installing.

3. Mark Starting Line

Use a level to mark the starting line for the first row.

4. Cut Panels

Cut panels as needed using standard woodworking tools.

5. Apply Adhesive

Apply construction adhesive to the back of the panel.

6. Install Panels

Start at the bottom of the wall and work upward.

7. Fasten Panels

Secure panels using finish nails or screws. Whenever possible, fasten through the tongue and into wall studs.


8. Finish Edges

Trim panels as needed and install optional edge trim.

Have questions? Email customerservice@timbermosaics.com

EXAMPLE WALL DIAGRAM

Example wall diagram shown for a 10'w x 8'-4"w

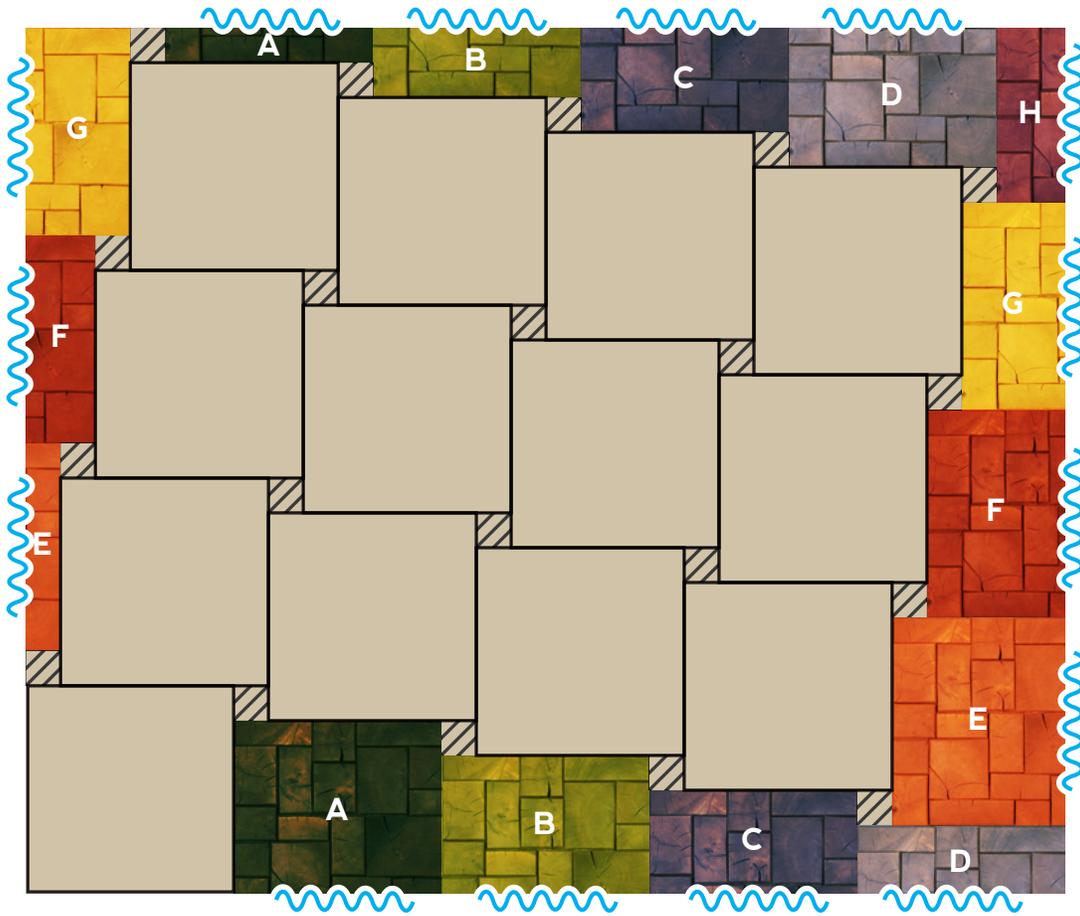


KEY

-  FULL PANEL
-  CUT SIDE
-  SPACER BLOCKS
-  PANEL CUTS

PANEL ORIENTATION

Top and Right side of panel has a tongue

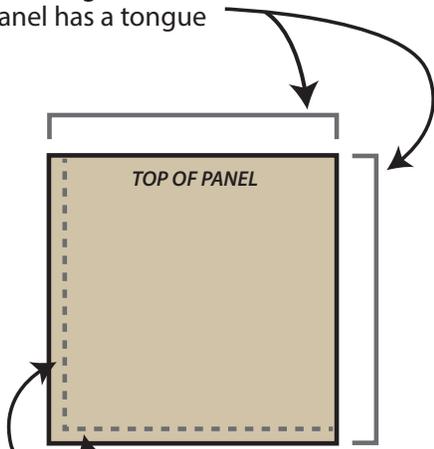

Bottom and left side of panel has a groove

WALL CROSS SECTION

Place screw or nail through the tongue on an angle

Apply construction adhesive to back of panel

